

Hinged Window Installation Instructions

Your Northview Hinged Window can be installed in any one of 4 configurations: a hopper (Fig.1) an awning (Fig. 2), a left hinged casement (Fig. 3), or a right hinged casement (Fig. 4)

Fig. 1



Fig. 2



Fig. 3



Fig. 4



1) Drilling weep holes.

We recommend you drill 4 holes for proper water drainage on your new window. You will need a power drill with an 1/8" drill bit. All holes will be drilled in the sill of the window as shown in Fig. 5.

- First drill 2 horizontal holes approx. 4" from each end (Hole A) making sure to drill through 3 walls of PVC as shown in Fig.5
- Next, drill 2 vertical holes (Hole B), the 3 walls of PVC as shown in Fig. 5 (1-1/4" into the frame) spaced evenly along the sill of the window.

These holes should only be drilled through a single wall of PVC! DO NOT drill through the bottom of the sill!

2) Next install the window into your wall opening and secure through the jambs using a pan head screw in the recessed area around the frame as shown in Fig. 6. Use a high quality pure silicone to seal your window around the perimeter.



Weep Hole Drilling

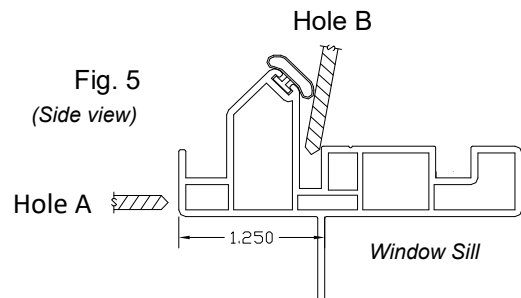


Fig. 5
(Side view)

Fig. 6
(Top View)

