

# Barn Sash Installation



Northview Barn Sashes are created to match the traditional, aesthetically correct appearance while incorporating modern profiles that are easy to maintain. We use a traditional profile with 2-3/8" wide stiles and top rail with a traditional wider 3-3/8" bottom rail. Our 1-1/8" sash are designed for easy disassembly, allowing for easy glass replacement without unsightly face fasteners.

**Fig. A**



**Fig. B**



To Install:

- 1) Build a frame or re-size your opening 1/4" larger than the actual barn sash overall size.
- 2) Measure completed opening to the inside and then cut 2 sets of 1" x 1/2" stops (strips).
  - a. One for the inside of the barn sash window
  - b. One for the outside of the barn sash window
- 3) Install 1 set of stops inside the opening flush with the outside of the wall. **(See fig A)**
- 4) Install/place the barn sash into opening against the stops tightly. **(See fig B)**
- 5) Install the inside stops tight against the sash wedging the window in place. **(See fig C)**
- 6) Finally seal from the outside and finish the outside wall to your preferences. **(See fig D)**

**Fig. C**




**Fig. D**



## \*Optional Hinged Mounting Method

Note: Use 1" long screws

End Mount Option

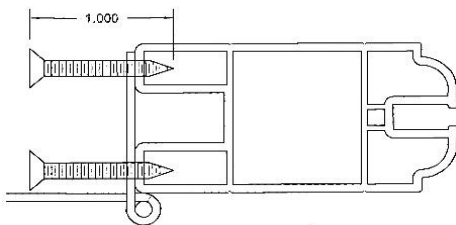

Face Mount Option

